

IBM[®]

PARTS
CATALOG

TYPE 11
ELECTRIC KEY PUNCH


INTERNATIONAL BUSINESS MACHINES CORPORATION
590 MADISON AVENUE, NEW YORK 22, NEW YORK

Printed in U.S.A.

Sept. 15 1947

Form No. 12-7089-0

COVER VIEW

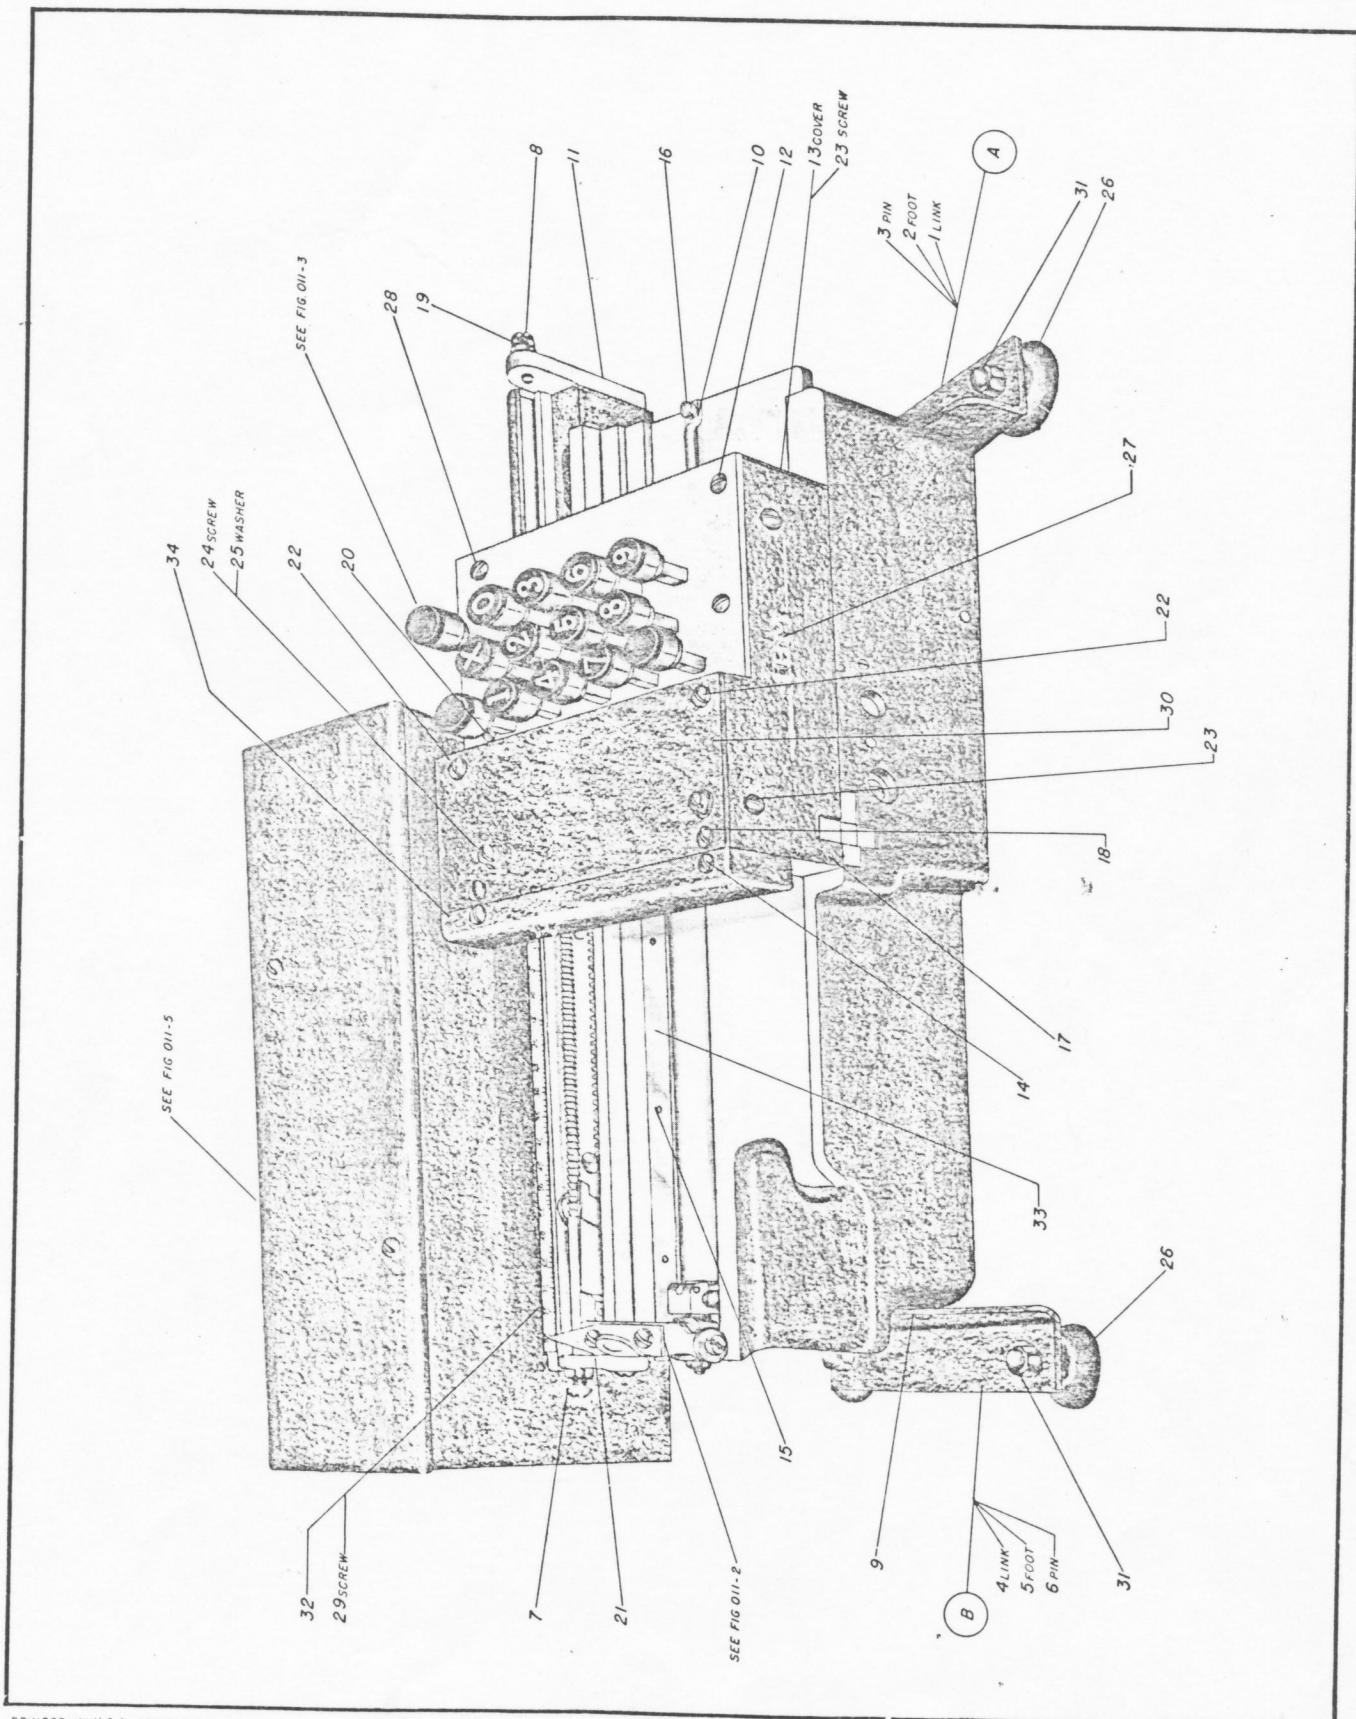

| PART NO. | PART NAME |
|----------|--|
| A | 1 4474 RACK ASSEMBLY 1 835 RACK ROLLER STUD - RIGHT 6236 RACK ROLLER STUD - LEFT 6237 RACK ROLLER STUD - SHORT 7052 RIVET - LONG 7053 RIVET - SHORT 6601 SKIP BAR STUD 6153 CASK CARRIER STUD 11535 CASK CARRIER STUD 11696 SKIP BAR COLUMN 112310 CARRIER CARRIER PLATE ASSEMBLY 114591 MARGIN CARRIER - LEFT 115322 SKIP BAR CARRIER 115323 CARD FEED ASSEMBLY - LEFT 145329 CARD RETAINER SPRING 143330 LONG CARRIER PIVOT 15862 CARD FEED ASSEMBLY - LEFT 15863 CARD RETAINER 165012 ROCK SHAFT SPINDLE ASSEMBLY 165014 ROCK SHAFT 163125 ESCAPEMENT LEVER ASSEMBLY 153126 ESCAPEMENT LEVER ASSEMBLY 12102 ESCAPEMENT LEVER PIN 214337 ESCAPEMENT LEVER PIN 153121 ESCAPEMENT LEVER 159240 MECHANISM HOLDER ASSEMBLY 36229 SET SCREW 70807 SPRING STUD 8235 PIVOT STUD 8935 TENSION SPRING 89359 SPRING PIN 89041 STUD WASHER 02038 ESCAPEMENT PIN 102581 HOLDING ASSISTANT 159239 TOGGLE LEVER ASSEMBLY 176242 TEE LEVER ASSEMBLY 18233 TEE LEVER LINK 70055 TOGGLE LEVER 14643 TEE LEVER |
| B | 1 23 1 4 14 1 5 15 1 6 16 1 7 17 1 8 18 1 9 19 |
| C | 1 20 1 21 1 22 1 23 1 24 1 25 1 26 1 27 1 28 1 29 1 30 1 31 1 32 1 33 1 34 1 35 1 36 1 37 |
| D | 1 20 1 21 NS 22 |
| E | 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 |

FIGURE NO. OII-2 SUPERSEDES FIG. OII-2
DATED SEPT 15, 1947

SUPERSEDES FIG. 011-
DATED SEPT 15, 1947

DATE MAY 26, 1948

RACK & MECHANISM HOLDER ASSEM'S

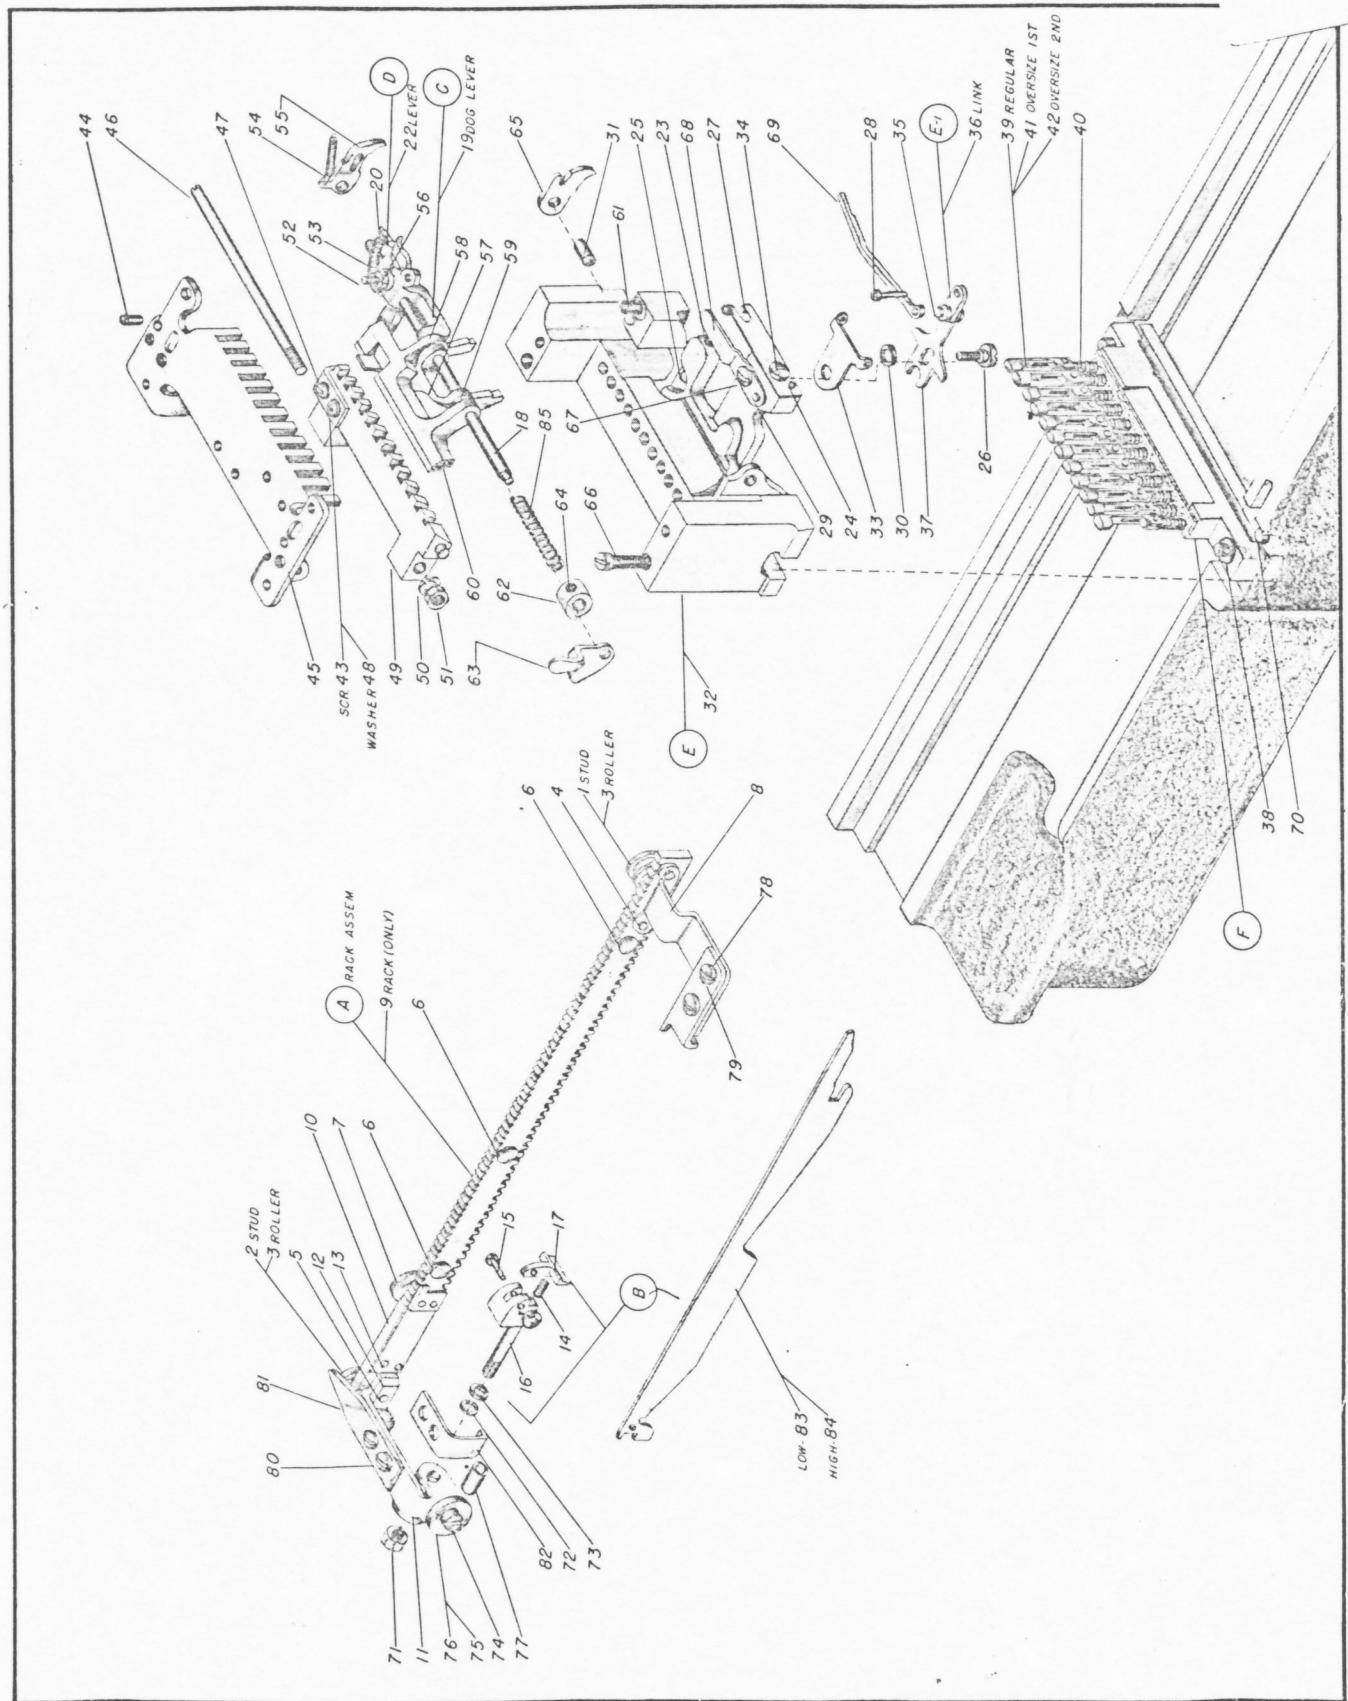


FIG. 011-2

TYPE 11

FIGURE NO.011-3

KEY PLUNGER & GUIDE PLATE ASSEM


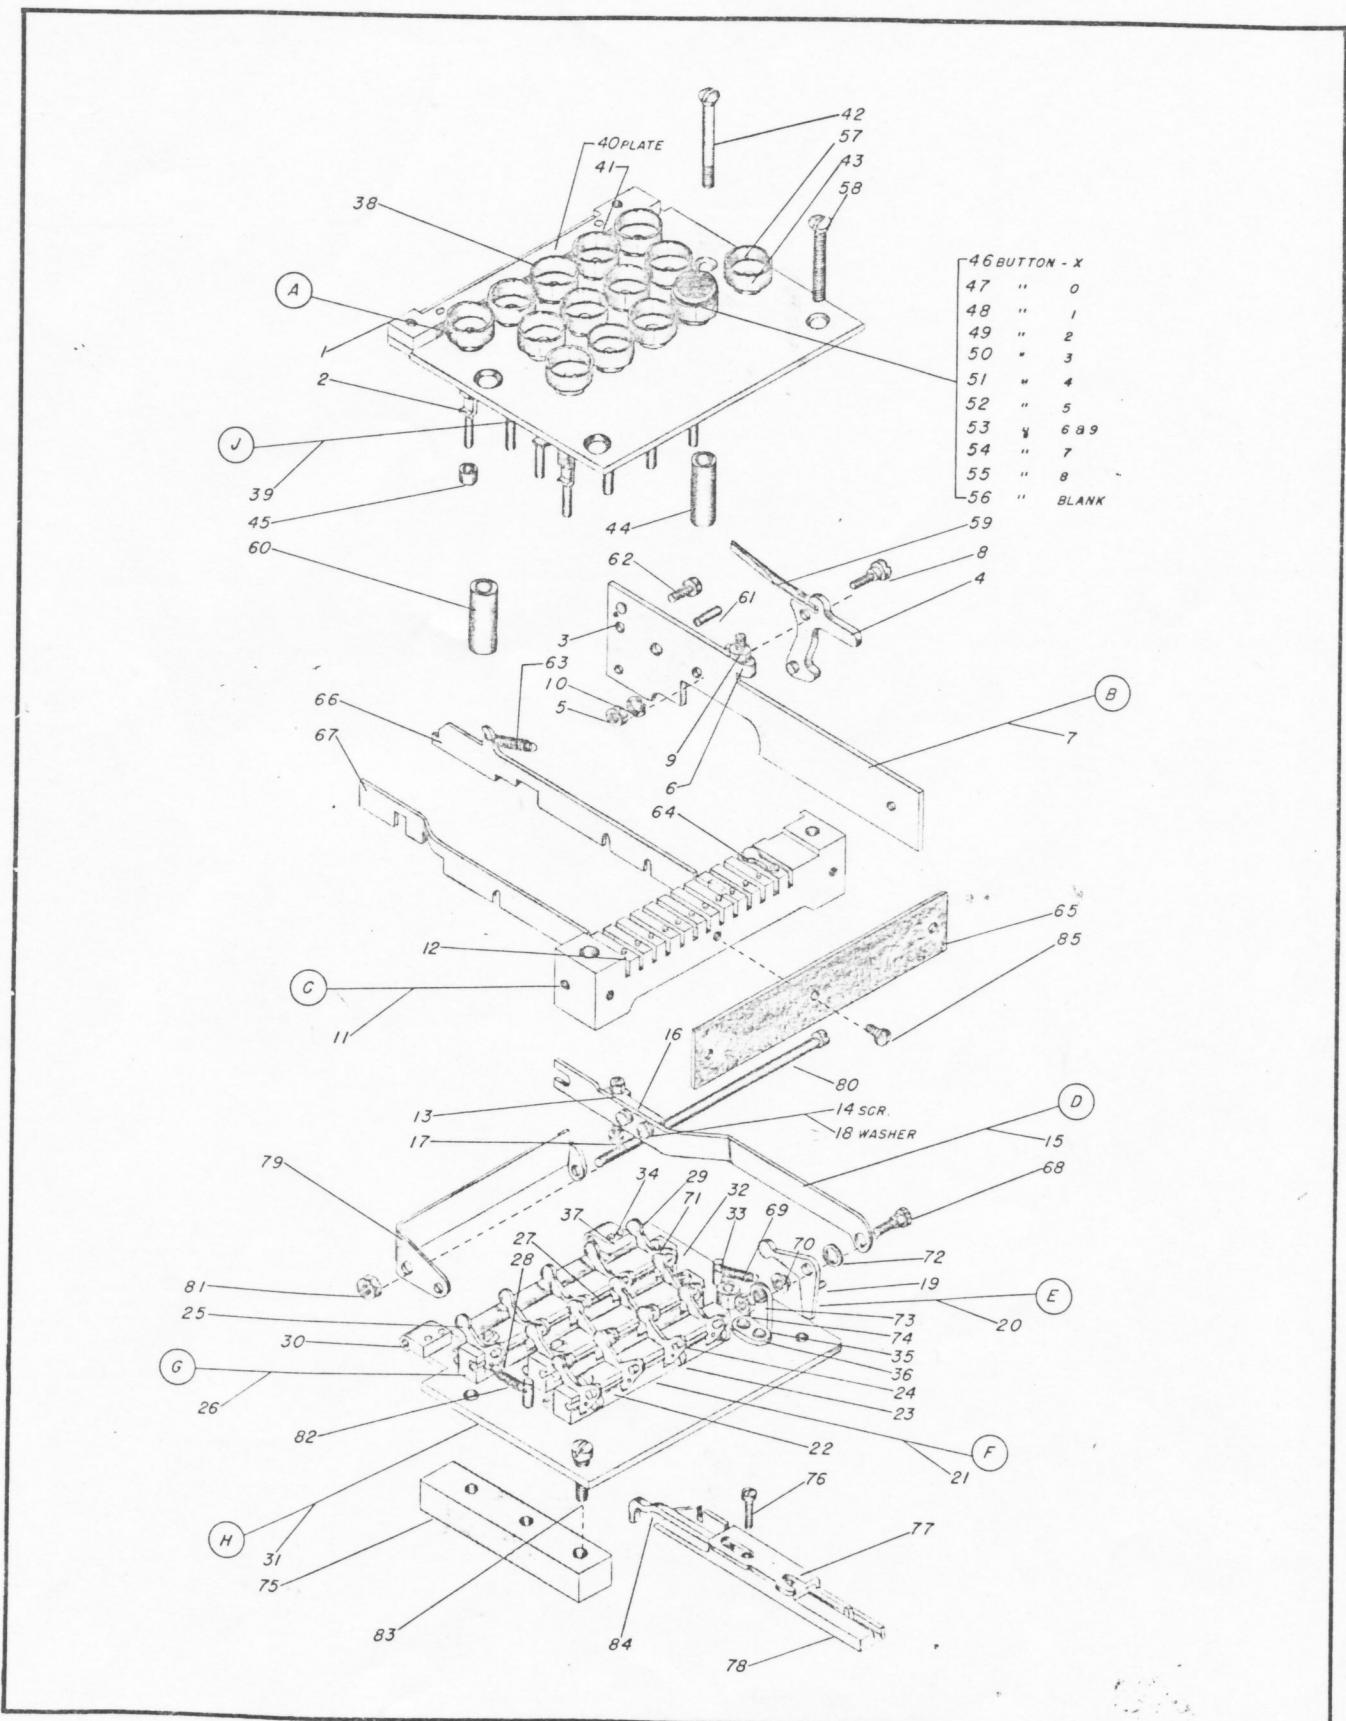


FIGURE NO. OII-4

ARMATURE & TOGGLE ASSEM'S

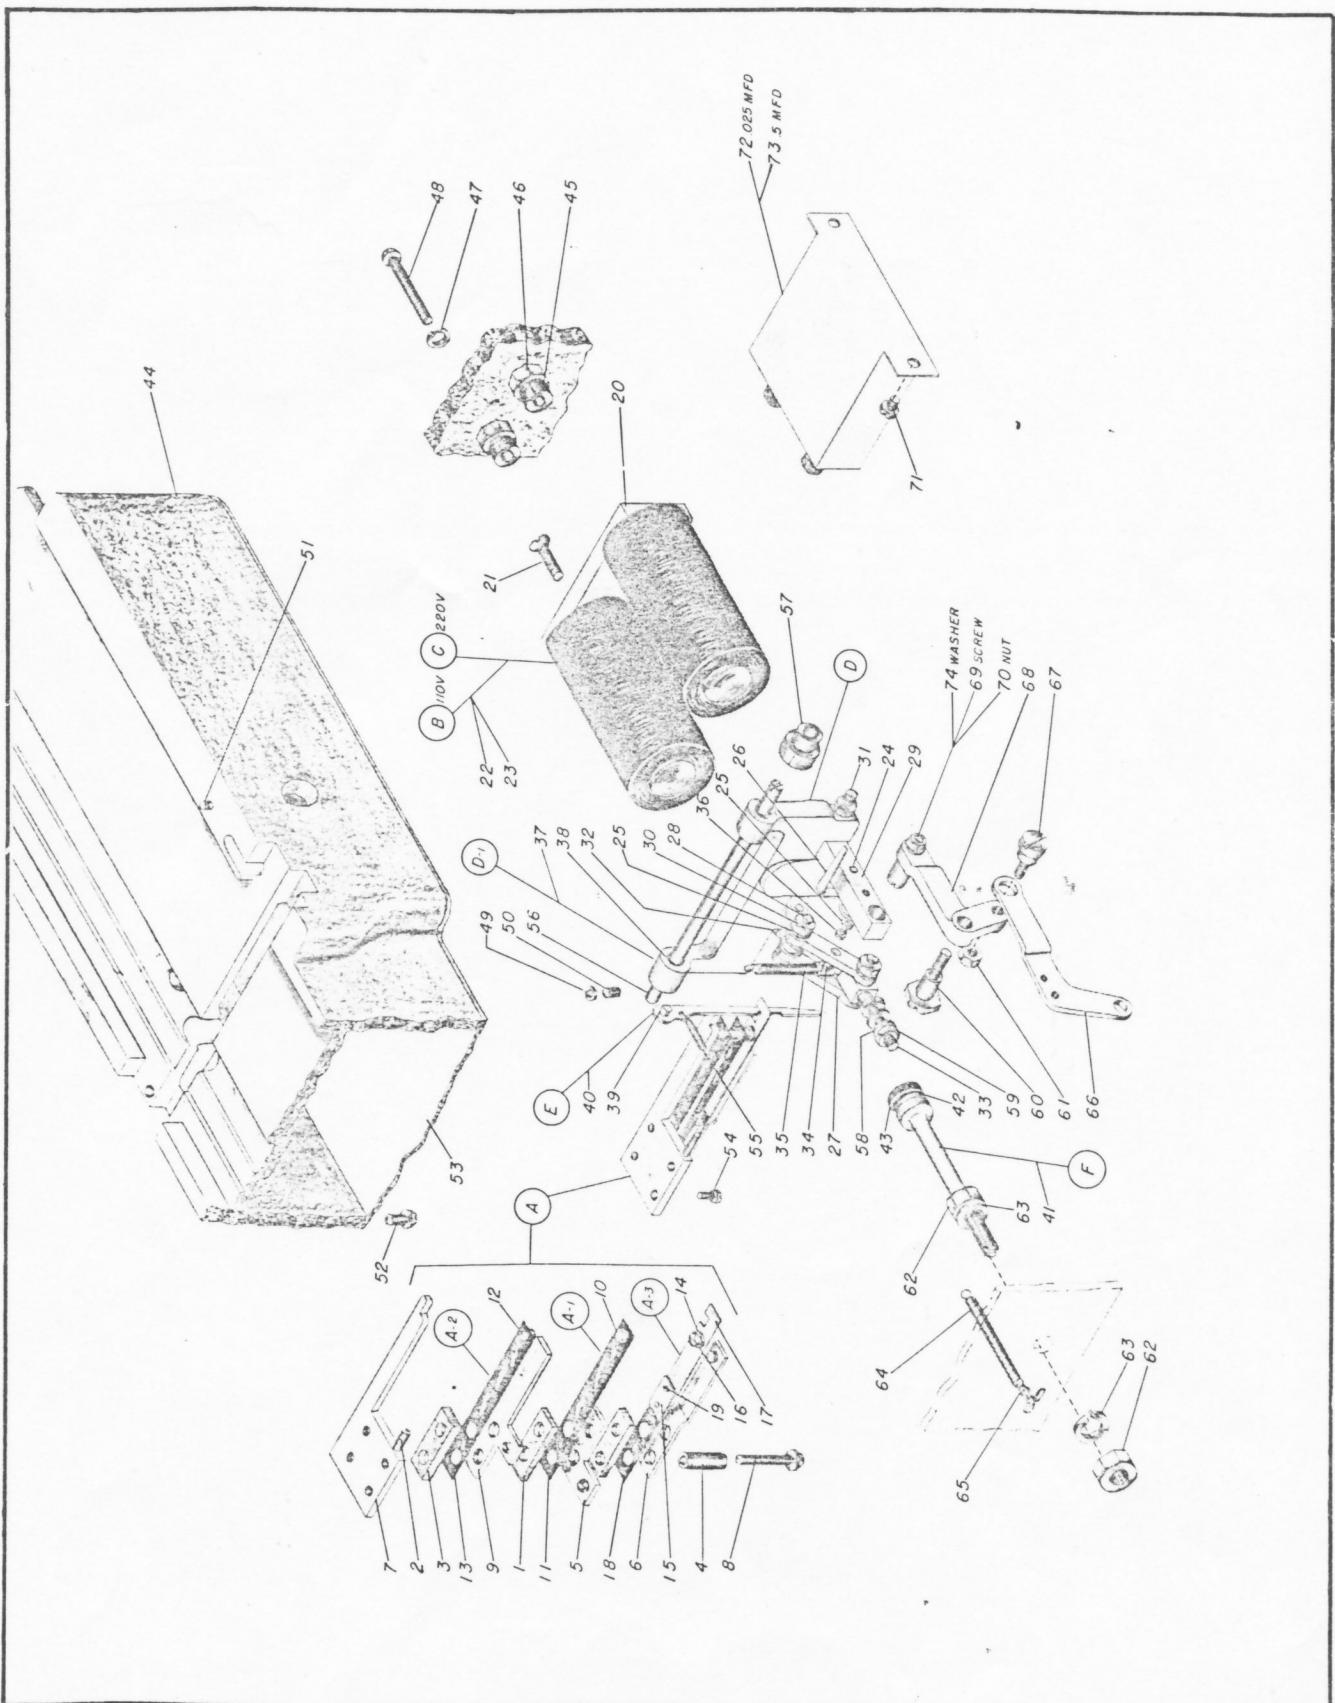

| REF. NO. | PART NO. | PART NAME | REF. NO. | PART NO. | PART NAME |
|----------|----------|---------------------------------|----------|--|-----------|
| A | 1 | 14479 MAIN SPRING ASSEMBLY | 37 | 6118 SERVICE CORD | |
| | 2 | 6904 GEAR ASSEMBLY | 38 | 7059 FEMALE PLUG | |
| | 7956 | MAIN SPRING BOX ASSEMBLY | 39 | 7349 CABLE CLAMP SCREW NUT | |
| A1 | 3 | 14477 MAIN SPRING PIN | 40 | 17975 PLUG REINFORCEMENT | |
| | 6838 | STUD | 41 | 17976 PLUG REINFORCEMENT | |
| | 4 | 6877 PIN | 42 | 31641 CABLE CLAMP | |
| | 5 | 14444 STUD | 43 | 53193 CABLE ENTRANCE BUSHING | |
| | 6 | 11446 PLATE | 43 | 64288 SOLDERLESS CONNECTOR | |
| | 7 | 11447 STUD | 45 | 72162 RESISTOR | |
| B | 8 | 10976 RACK GUARD GUIDE ASSEMBLY | 45 | 46650 PLATE DRIVE PINNIFER WAVE STACK | |
| | 9 | 6991 RACK GUIDE | 46 | 460853 SELENIUM RECTIFIER | |
| | NS | 6992 RACK GUIDE | 47 | 167726 CAPACITOR CLAMP | |
| C | 11 | 7978 FUSE HOLDER ASSEMBLY | 48 | 167740 CAPACITOR CLAMP | |
| | 12 | 6974 KNIFE BLADE CONTACT SCREW | 49 | 167758 IDENTIFICATION PLATE | |
| | 13 | 6972 KNIFE BLADE CONTACT - LEFT | 50 | 50 IDENTIFICATION PLATE | |
| | 14 | 6970 FUSE HOLDER ASSEMBLY | 51 | 170109 AUTO TRANSFORMER 220V - 60 CY | |
| | 15 | 6973 FUSE CONNECTION | 52 | 170110 AUTO TRANSFORMER 220V - 60 CY | |
| | 16 | 6976 FUSE CLIP NUT | 53 | 170115 CABINET ASSEMBLY | |
| | 17 | 7041 CONTACT SCREW - SHORT | 54 | 170116 SUPPORT BRACKET | |
| | 18 | 7058 FUSE CLIP - SHORT | 55 | 170117 CABINET COVER | |
| | 19 | 100952 WIRE CONNECTION | 56 | 17341 SUPPORT BRACKET SCREW NUT | |
| | 20 | 105047 LOCK WASHER | 57 | 227 SUPPORT BRACKET SCREW | |
| | 21 | 160894 FUSE CLIP SCREW | 58 | 292 SUPPORT BRACKET SCREW | |
| D | 22 | 188139 GOVERNOR ASSEMBLY | 59 | 292 CAPACITOR CLAMP SCREW | |
| | 23 | 111462 CUTTER PIN | 60 | 7341 PARTS NOT SHOWN ON SUB-ASSEMBLIES | |
| | 24 | 33345 LONG SPACER | 61 | 598 RACK GUARD AND GUIDE MTG SCREW | |
| | 25 | 103236 SHUE | 62 | 632 RACK GUARD & GUIDE MTG DOWEL PIN | |
| | 26 | 147898 SPINION SHAFT ASSEMBLY | 63 | 12465 MARGIN STOP RACK SCREW | |
| | 27 | 167980 RETAINING WASHER | 64 | 12465 MARGIN STOP ASSEMBLY SCREW | |
| | 28 | 167908 HOUSING ASSEMBLY | 65 | 14415 MAIN SPRING MOUNTING SCREW | |
| | 29 | 188104 DRIVE HUB ASSEMBLY | 66 | 62031 MAIN SPRING MOUNTING LOCKWASHER | |
| | 30 | 188110 SHORT SPACER | 67 | 62031 REINFORCING WASHER | |
| | 31 | 190383 DRIVE HUB ASSEMBLY | 68 | 28692 MOUNTING STUD NUT | |
| E | 170111 | SELENIUM RECTIFIER ASSEMBLY | 69 | 11592 STUD LOCK WASHER | |
| | 170118 | SELENIUM RECTIFIER ASSEMBLY | 70 | 19092 STUD MOUNTING STUD | |
| | 170119 | SELENIUM RECTIFIER ASSEMBLY | 71 | 184775 CABINET MOUNTING STUD | |
| | | | 72 | 3344 FUSE HOLDER SCREW | |
| | | | 73 | 7039 FUSE HOLDER SCREW | |
| | | | 74 | 24821 FUSE INSULATION SPACER | |
| | | | 75 | 159577 BLOCK INSULATION SPACER | |
| | | | 76 | 159592 GOVERNOR MOUNTING SCREW | |
| | 32 | 92 CABLE CLAMP SCREW WASHER | 77 | 77 FUSE COVER SCREW | |
| | 33 | 124 CABLE CLAMP WASHER | 78 | 12781 FUSE COVER | |
| | 34 | 227 CABINET COVER SCREW | 79 | 38391 RACK GUARD AND GUIDE MTG SPRING | |
| | 35 | 1413 CABINET COVER MOUNTING NUT | 80 | 8002 MARGIN STOP | |

FIGURE NO.011-5

SEL. RECTIFIER & GOVERNOR ASSEM'S

